


Cable Assembly Instructions


Step 1

ALL PARTS OF THE CONNECTOR ARE SHOWN, A CRIMP TOOL IS NECESSARY TO COMPLETE THE TERMINATION




Step 3

INSERT MAIN BODY INTO BRAID AND DIELECTRIC.

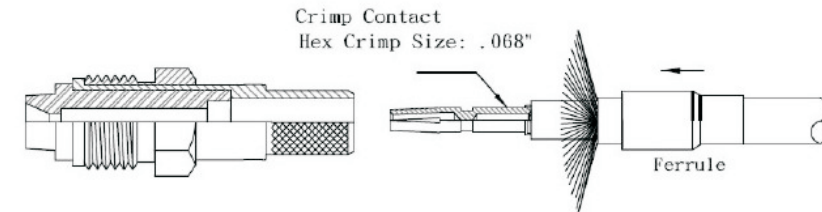


Step 2

STRIP THE CABLE INNER CONDUCTOR, DIELECTRIC, BRAID, AND JACKET

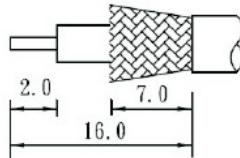

Complete

CRIMP THE FERRULE

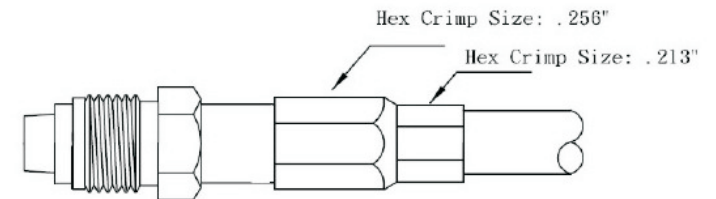

Take the actual assembly as the standard. This drawing only provides reference.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.