



Cable Assembly Instructions


Step 1 ALL PARTS OF THE CONNECTOR ARE SHOWN

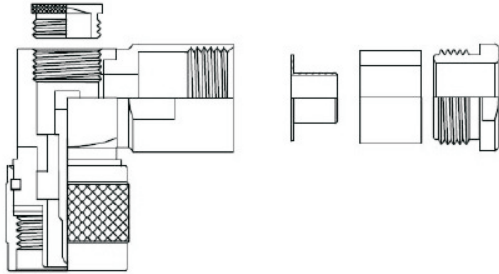


Step 2 STRIP THE CABLE INNER CONDUCTOR, DIELECTRIC, BRAID.

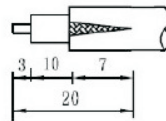


Step 3 INSERT MAIN BODY INTO BRAID AND DIELECTRIC.

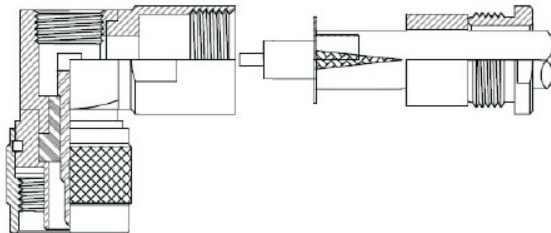

Step 4 CONTACT PIN TO SOLDER

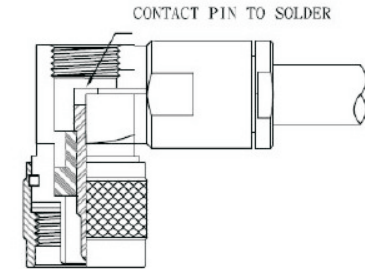

Complete 5 THEN SCREW THE NUT UNTIL IT IS TIGHT

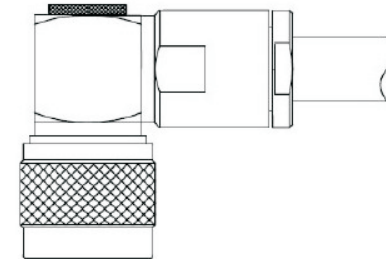

Take the actual assembly as the standard. This drawing only provides reference.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.