



Cable Assembly Instructions

Step 1 ALL PARTS OF THE CONNECTOR ARE SHOWN, A CRIMP TOOL IS NECESSARY TO COMPLETE THE TERMINATION



Step 2 STRIP THE CABLE INNER CONDUCTOR, DIELECTRIC, BRAID, AND JACKET

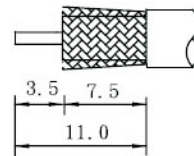


Step 3 INSERT INNER CONDUCTOR INTO THE CONTACT PIN AND CRIMP IT WITH THE CRIMP TOOL HEX SIZE 0.068". THEN SLIDE THE FERRULE ONTO CABLE.

1: CRIMPED CONTACT
HEX CRIMP SIZE: .100"




Step 4 INSERT MAIN BODY INTO BRAID AND DIELECTRIC.

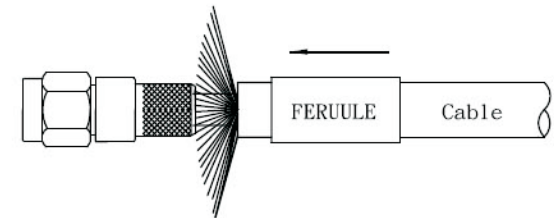

Complete 5

SLIDE THE FERRULE OVER BRAID AND CRIMP IT WITH THE CRIMP TOOL HEX SIZE: 0.213"

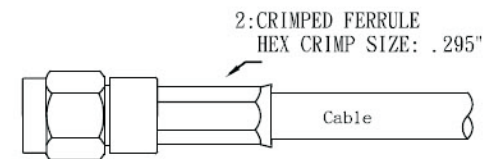

2: CRIMPED FERRULE
HEX CRIMP SIZE: .295"

Take the actual assembly as the standard
this drawing only provides reference

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.