


Step 1.

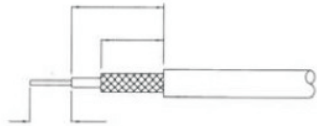


Strip cable to proper dimensions as shown on each type of connector in catalog or in drawings.

Note: Do not nick braid dielectric, or center conductor.


Tinning of center conductor is for solder method.

Step 2.

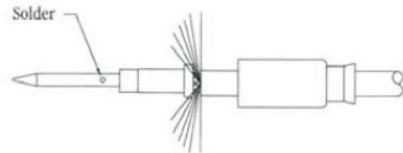

Slide ferrule into cable jacket. Slide busing and rear insulator over dielectric. Insert conductor and position contact, then butt against the cable dielectric, and solder it as shown.


Step 3.

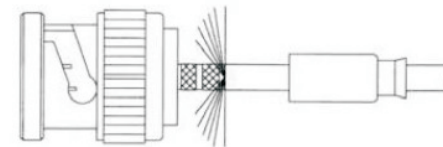

Insert prepared cable assembly into the body until contact snaps into place in insulator.

The cable braid should be separated evenly around the body

Step 4.

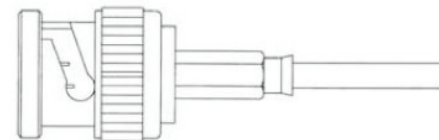

Slide the ferrule over braid and against body.

Crimp ferrule using appropriate crimp tool.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid

Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

