


Cable Assembly Instructions


Step 1

ALL PARTS OF THE CONNECTOR ARE SHOWN, A CRIMP TOOL IS NECESSARY TO COMPLETE THE TERMINATION

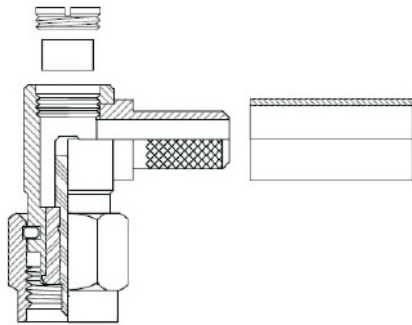


Step 2

STRIP THE CABLE INNER CONDUCTOR, DIELECTRIC, BRAID, AND JACKET

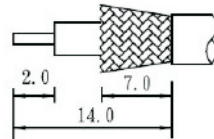


Step 3

INSERT MAIN BODY INTO BRAID AND DIELECTRIC.

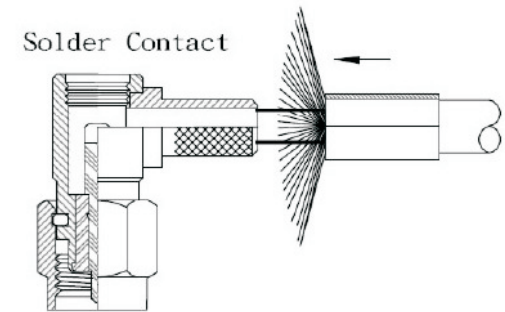

Complete

CRIMP THE FERRULE (Hex Crimp Size: .213") AND SCREW ON THE NUT

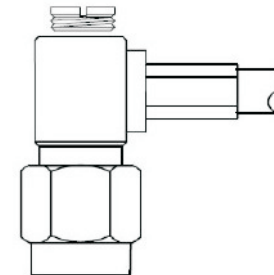

Take the actual assembly as the standard. This drawing only provides reference.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.