

CENTER CONTACT

CRIMP FERRULE


1.



Preparation of cable

- (1) Slide crimp ferrule onto cable.
- (2) Strip cable to recommended dimensions shown in catalogue.


2.



Crimp center contact to cable center conductor

- (1) Insert cable center conductor into center contact until it butts against cable dielectric.
- (2) Crimp (or solder) center contact.


3.

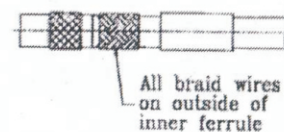

Attach cable to connector body

- (1) Insert cable assembly into rear of connector body, with all braid wires on outside of inner ferrule.
- (2) Push cable assembly forward until contact snaps into place in insulator.

4.



Final assembly

- (1) Slide crimp ferrule forward until flush with connector body and crimp.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid

Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

