




 CONNECTOR BODY	 CENTER CONTACT BRAID CLAMP BUSHING WASHER NUT
1. 	Preparation of cable (1) Slide crimp ferrule onto cable. (2) Strip cable to recommended dimensions shown in catalogue.
2.  Solder	Solder center contact to cable center conductor (1) Insert cable center conductor into center contact until it butts against cable dielectric. (2) Solder center contact.
3.  Fold back braid over here	Install braid clamp (1) Place braid clamp over cable braid. (2) Comb braid wires out straight and fold back over front shoulder of braid clamp. (3) Trim braid wires flush with edge of braid clamp.
4. 	Final assembly (1) Mount cable assembly and hardware into connector body. (2) Screw and tighten nut.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid

Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

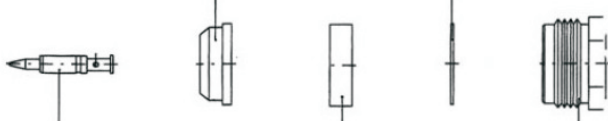