


1.



Preparation of cable

- (1) Slide crimp ferrule onto cable.
- (2) Strip cable to recommended dimensions shown in catalogue.


2.

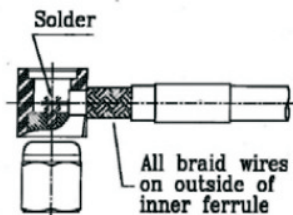

Solder center contact to cable center conductor

- (1) Insert cable into connector body with center conductor placed in contact slot, and with all braid wires on outside of inner ferrule.
- (2) Soft solder center contact to cable center conductor.

3.

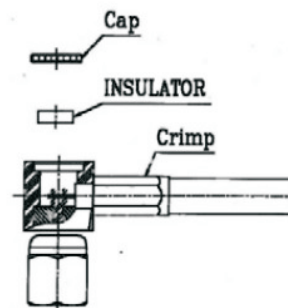

Final assembly

- (1) Slide crimp ferrule forward until flush with connector body and crimp.
- (2) Put insulator into connector body.
- (3) Press cap into opening in rear of connector body until it stops.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid

Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

