




Bez.: Montageanleitung 23

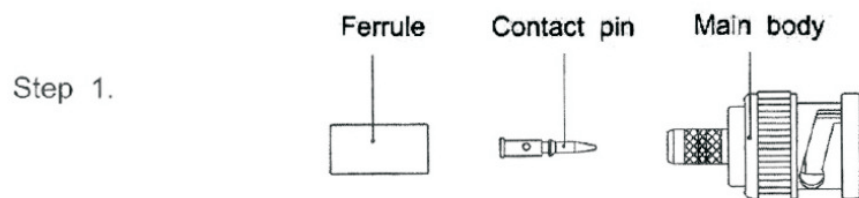

Step 4.



Step 5.

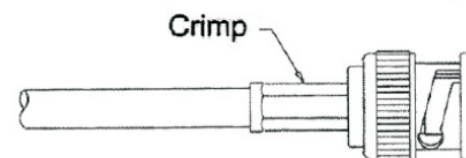

Step 1. All parts of the connector are shown. A crimp tool is necessary to complete the connection.

Step 2. Strip the cable inner conductor, dielectric, braid, and jacket.

Step 3. Insert inner conductor into the **Contact pin** and solder on the cable.

Then slide the **Ferrule** onto cable.

Step 4. Insert the **Main body** into braid and dielectric.

Step 5. Slide the **Ferrule** over braid, crimp it with the crimp tool as shown.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid
Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

